 


# BUSBARS

for S, SL, T and DC miniature circuit breakers



## Busbars fork type

CROSS SECTION (mm <sup>2</sup> )	BUSBAR CURRENT START OF BUSBAR/ MIDDLE INFEEED	MODULES/ PHASES	ITEM NO.	WEIGHT g/ EACH	PACKING UNIT	SUITABLE END CAP ITEM NO.
----------------------------------	--	-----------------	----------	----------------	--------------	---------------------------

### 1-phase

12	65/110	56	<b>SB16010</b>	250	50	
----	--------	----	----------------	-----	----	--

### 1-phase 1-pole circuit breaker + auxiliary contact

24	90/150	37/1	<b>SDO.124</b>	200	50	
----	--------	------	----------------	-----	----	--

### 2-phase and 1-phase + N

10	63/100	28/2	<b>SB26010</b>	390	20	SB.A5
----	--------	------	----------------	-----	----	-------

### 3-phase + N, L1/N, L2/N, L3/N, for MCB 1+N, 2 modules

16	80/130	27/2 3+N	<b>SB41627</b>	725	15	SB.A3
----	--------	----------	----------------	-----	----	-------

### 2-phase 2-pole circuit breaker + auxiliary contact

16	80/130	22/2	<b>SB26216</b>	310	20	SB.A2
----	--------	------	----------------	-----	----	-------

### 3-phase

10	63/100	4/3	<b>SB31210</b>	84	25	SB.A1
10	63/100	19/3	<b>SB36010</b>	420	20	SB.A1
16	80/130	19/3	<b>SB36016</b>	675	20	SB.A2

### 3-phase 3-pole circuit breaker + auxiliary contact

16	80/130	16/3	<b>SB36316</b>	630	20	SB.A2
----	--------	------	----------------	-----	----	-------

### 3-phase 1-pole circuit breaker + auxiliary contact

16	80/130	36/1	<b>SDO.316</b>	500	20	SB.A2
----	--------	------	----------------	-----	----	-------

### 4-phase and 3-phase + N

16	80/130	14/4	<b>SB46016</b>	835	15	SB.A3
----	--------	------	----------------	-----	----	-------



## End caps for busbars

FOR BUSBARS ITEM NO.	ITEM NO.	WEIGHT g/ EACH	PACKING UNIT
----------------------	----------	----------------	--------------

SB31210, SB36010	<b>SB.A1</b>	0,8	10
SB36016, SB36316, SDO.316, SB41627, SB26216	<b>SB.A2</b>	1	10
SB46016	<b>SB.A3</b>	1,1	10
SB26010	<b>SB.A5</b>	0,8	10